
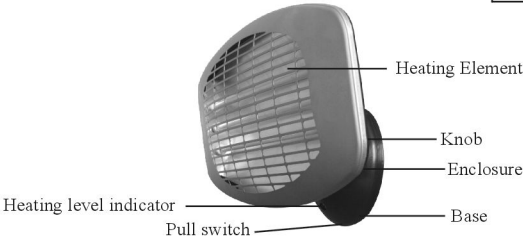


According to the request of use angle, Heating Element Assembly can adjust angle at 0°~45° (fig.1).

Caution:
Do not change the tilt angel during use.

Risk of fire and/or burn!
Turn off device and let it cool down for approx. 15 minutes.

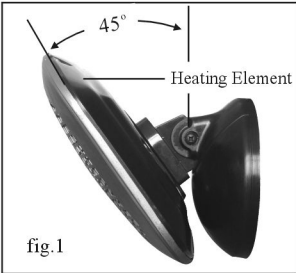

Operation

The heater is switched on by a pull switch. The slight vibration noticeable when the appliance is switched on will stop after a few seconds.
If you can see the figure "0" heating level indicator, the first pull of the pull switch will activate level 1: 500W. A second pull activates level 2: 1000W. Level 3: 1500W is activated by the third pull of the pull switch.

For switching off the appliance, the pull switch is pulled as many times until level "0" is displayed by the heating level indicator.

If required the device should be cleaned with a soft cloth after use. Before cleaning always make sure that the device is switched off and has cooled down (at least 15 minutes after use).

Technical data

Description	Patio Quartz Heater
Article no.:	TH01A
Power input:	500W, 1000W, 1500W
Capacity:	230V~ 50Hz
Weight:	approx. 3.1 kg
Heating level:	3
Cord length:	approx. 1.8 m

User Manual

Read these instructions carefully before using the device and always keep them ready to hand.

PATIO QUARTZ HEATER
TH01A



Before use

Please read the instructions carefully before using the appliance. Check if there are any visible damages. Contact your local customer service for any damages found.

The power supply cord and the plug must not have any damages. In these cases a qualified customer service must check the device before start up.

Fill in the order no. (which can be found on the rating plate of the device) and keep these instructions ready to hand.

Order no:

Basic safety instructions

This product is state-of-the-art and complies with the approved technical safety and electromagnetic compatibility standards, nevertheless dangers can occur. Please operate the heater when functioning properly only and under consideration of the operation instructions. The device must be used for its one purpose only.

All technical operations, as well as the installation and maintenance should be performed by trained personnel. In case these conditions are not followed any guarantee liabilities by the manufacturer expire. Due to permanent technical improvements changes of the product and/or of operation can result.

Installation-Start up of the appliance

• Installation

- The device has been checked upon functional efficiency but still damages can result from transport. Therefore please inspect the device upon proper condition directly after receipt. Please do not throw away the packaging carton of the heater. You might need it for purposes of storage or transport or when you need to send it back to our service-center in case of damages.
- Please keep the operation instructions thoroughly. In case the device is given to a third party the instructions must be passed on along.
- The device is for house and garden use only.
- Place the device on an even and safe place which can carry the weight of the device.
- To avoid electrical shocks never dip the device into water or other fluids. The power supply cord and the plug should also not come in contact with water or other fluids.
- Never place the device in transit areas to avoid the toppling of the device.
- When operating under a marquee make sure you keep enough distance to the marquee to avoid damage and ignition.
- Make sure the power cord is undamaged, not clamped or layed in the transit area.

- Make sure the power supply cord has neither contact with sharp edges nor with hot surfaces

• Start up

- Before connecting the appliance check that the details on the rating plate are compatible with your power supply. A false connection can lead to damages and personal injuries.
- Please do not use the heater in combination with a timer programmer or other devices that start the appliance automatically as fire hazard can occur when the heater is placed falsely or is covered in the meantime by some other person.

Safety instructions

- Never touch the device with wet hands.
- Electrical safety is only guaranteed if the appliance is connected to a properly installed protective system with an earth conductor.
- Never touch the heater and do not turn it as it is in use. Please be careful after switching off the appliance as it takes approx. 15 minutes until it has cooled-down. Risk of burn!
- Do not cover the heater with clothes or blankets.
- Do not use the heater as for drying clothes or as a coat rack.
- Please always switch off the heater and make sure that it is disconnected from power supply.
 - In case the heater has an interference.
 - When cleaning the device.
 - When the heater has toppled or fallen over.
 - In case the heater is damaged.
 - When the device is not in use.
- Do not expose the device to bad atmospheric conditions (storm, rain, snow, thunder storms, etc.).
- The electric installation and the use of your device must comply with the safety standards of your country.
- Do not place any easily inflammable objects near the heater when it is switched on. Risk of fire! Make sure all users are aware of the dangers and that they knew the above mentioned safety instructions.
- If you have questions concerning the installation please contact a qualified electrician.
- Never leave children alone with the heater.
- The appliance is equipped with some safety mechanism, which switches off the heater in the case that the device isn't in the upright position (e.g. after knocked over by a strong gust of wind).