

INSTRUCTION MANUAL

Portable Electric Heater | FOR INDUSTRIAL USE ONLY

SAFETY INSTRUCTIONS

Always operate the product from a power source of the same voltage, frequency and rating as indicated on the product identification plate.

To reduce the risk of electric shock, do not use this product with any solid state speed control device.

This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

Do not insert fingers or any other foreign object through the front and rear guard and into the blade.

Close supervision is necessary when any product is used by or near children or infirm persons. Do not allow children to use it as a toy.

Do not operate any product with a damaged cord or plug, after the product malfunctions, is dropped or appears damaged in any way. Return the complete product to the place of purchase for inspection, repair or replacement.

To reduce the risk of electric shock, do not immerse or expose the product or flexible cord to rain, moisture or any liquid.

This product should not be used in the immediate vicinity of water, such as sinks, bathtub, washbowls, swimming pool etc. where the likelihood of immersion or splashing could occur.

Switch off and unplug from outlet when not in use, before assembling or disassembling parts and before cleaning. Fully assemble the product if required before switching on.

Avoid contacting moving parts. Do not insert any object through the grill when the product is operating.

Do not cover the grill, or operate in close proximity to curtains, etc.

Always disconnect the product when moving it from one location to another.

The use of attachments or accessories not recommended or sold by the product distributor may cause personal or property hazards or injuries.

Never attempt to make any modifications to or repair the product yourself.

Have it repaired by a qualified person only.

Place the appliance on a flat and dry surface.

Manufacturer takes no responsibility for any damage caused by incorrect use.

WARNING

- 1) Do not use in flammable or explosive environment to prevent fire hazard and personal injury.
- 2) Precautions must be taken to avoid the back-flow of gases into the room from open flue of gas or other fuel-burning appliances.
- 3) The unit must be earthed to avoid any danger.
- 4) The unit is not designed to be continuously used 24 hours 7 days a week as it will shorten the product life and will void warranty.
- 5) The surfaces of this heater can become hot during operation.

USE & MAINTAIN

- 1) Make sure the unit's voltage is in accordance with local voltage before use.
- 2) The unit is recommended for use in ordinary indoor situation, but not at high humidity.
- 3) To ensure prolonged safe use ensure you have this unit inspected & cleaned on a regular basis.
- 4) Regularly inspect cord & plug & do not use if damaged. If damaged contact manufacturer.
- 5) Connect the plug to a suitable socket and select a setting:
For model **PHB3-9/PHB3-15:** OFF/FAN/HEAT
For model **PHB3-28:** OFF/FAN/HEAT LOW/HEAT HIGH
- 6) After use, select FAN setting and run for 10 minutes to cool down the elements.



TO PREVENT SERIOUS INJURY, READ AND UNDERSTAND ALL WARNINGS AND INSTRUCTIONS BEFORE USE.



INSTRUCTION MANUAL

Portable Electric Heater | FOR INDUSTRIAL USE ONLY

SAFETY INSTRUCTIONS

Always operate the product from a power source of the same voltage, frequency and rating as indicated on the product identification plate.

To reduce the risk of electric shock, do not use this product with any solid state speed control device.

This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

Do not insert fingers or any other foreign object through the front and rear guard and into the blade.

Close supervision is necessary when any product is used by or near children or infirm persons. Do not allow children to use it as a toy.

Do not operate any product with a damaged cord or plug, after the product malfunctions, is dropped or appears damaged in any way. Return the complete product to the place of purchase for inspection, repair or replacement.

To reduce the risk of electric shock, do not immerse or expose the product or flexible cord to rain, moisture or any liquid.

This product should not be used in the immediate vicinity of water, such as sinks, bathtub, washbowls, swimming pool etc. where the likelihood of immersion or splashing could occur.

Switch off and unplug from outlet when not in use, before assembling or disassembling parts and before cleaning. Fully assemble the product if required before switching on.

Avoid contacting moving parts. Do not insert any object through the grill when the product is operating.

Do not cover the grill, or operate in close proximity to curtains, etc.

Always disconnect the product when moving it from one location to another.

The use of attachments or accessories not recommended or sold by the product distributor may cause personal or property hazards or injuries.

Never attempt to make any modifications to or repair the product yourself.

Have it repaired by a qualified person only.

Place the appliance on a flat and dry surface.

Manufacturer takes no responsibility for any damage caused by incorrect use.

WARNING

- 1) Do not use in flammable or explosive environment to prevent fire hazard and personal injury.
- 2) Precautions must be taken to avoid the back-flow of gases into the room from open flue of gas or other fuel-burning appliances.
- 3) The unit must be earthed to avoid any danger.
- 4) The unit is not designed to be continuously used 24 hours 7 days a week as it will shorten the product life and will void warranty.
- 5) The surfaces of this heater can become hot during operation.

USE & MAINTAIN

- 1) Make sure the unit's voltage is in accordance with local voltage before use.
- 2) The unit is recommended for use in ordinary indoor situation, but not at high humidity.
- 3) To ensure prolonged safe use ensure you have this unit inspected & cleaned on a regular basis.
- 4) Regularly inspect cord & plug & do not use if damaged. If damaged contact manufacturer.
- 5) Connect the plug to a suitable socket and select a setting:
For model **PHB3-9/PHB3-15:** OFF/FAN/HEAT
For model **PHB3-28:** OFF/FAN/HEAT LOW/HEAT HIGH
- 6) After use, select FAN setting and run for 10 minutes to cool down the elements.



TO PREVENT SERIOUS INJURY, READ AND UNDERSTAND ALL WARNINGS AND INSTRUCTIONS BEFORE USE.

